


# ASHFORD TRADITIONAL SPINNING WHEEL DOUBLE DRIVE

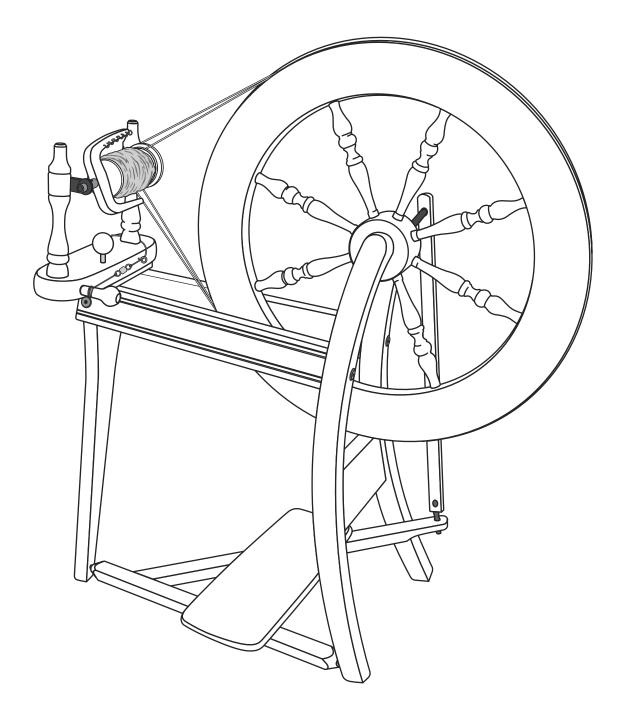

#### Ashford Handicrafts Limited

Factory and Showroom: 415 West Street PO Box 474, Ashburton 7700 New Zealand Telephone 64 3 308 9087 Facsimile 64 3 308 8664 Email: sales@ashford.co.nz Internet: www.ashford.co.nz

#### Ashford Guarantee

Thank you for purchasing this Ashford product. In the unlikely event there is any fault in manufacture we will replace the item. To validate our guarantee please visit our website or write to us.

## ASSEMBLY INSTRUCTIONS FOR THE ASHFORD TRADITIONAL SPINNING WHEEL -Double Drive-

Before commencing, please read these instructions completely, identify the parts and note the assembly sequence.

Remove any sharp corners or edges and smooth the surface of the wood with the sand paper provided. We recommend that the wood surfaces be waxed or sealed before assembly. This protects the kiln dried wood from the climatic changes and prevents it getting dirty or stained. The Silver Beech tree is a native of New Zealand and has a lovely variety of colour and grain.

For a silky smooth matt finish, use the Ashford Wax Finish to enhance the natural colours and character of this timber.

If you are assembling your spinning wheel on a table, we recommend you protect the surface with a towel, blanket or cardboard. Ashford spinning wheels are also available factory finished in clear lacquer.

## **Tools Required**







 










## Hints




Check hardware against full size illustration.

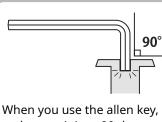

make sure it is at 90 degrees and is at the bottom of the hole.

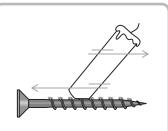


To make assembly easier use candle wax on the screws.

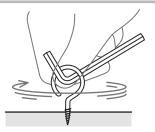

If the hook is hard to turn use the allen key.



Check the directions carefully.

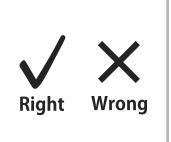

## More Information

Facebook

Join us on facebook.



## How-to videos on You Tube

Watch our how-to videos on You Tube. www.youtube.com/user/AshfordHandicrafts

www.facebook.com/ashford.wheels.looms




#### **The Wheel Magazine**


Ashford's annual fibrecraft magazine. Spinning, weaving, felting, dyeing and knitting projects, patterns and articles from around the world. To receive the glossy version delivered to you, subscribe at:


www.ashford.co.nz/subscribe


## Real Scale Hardware List

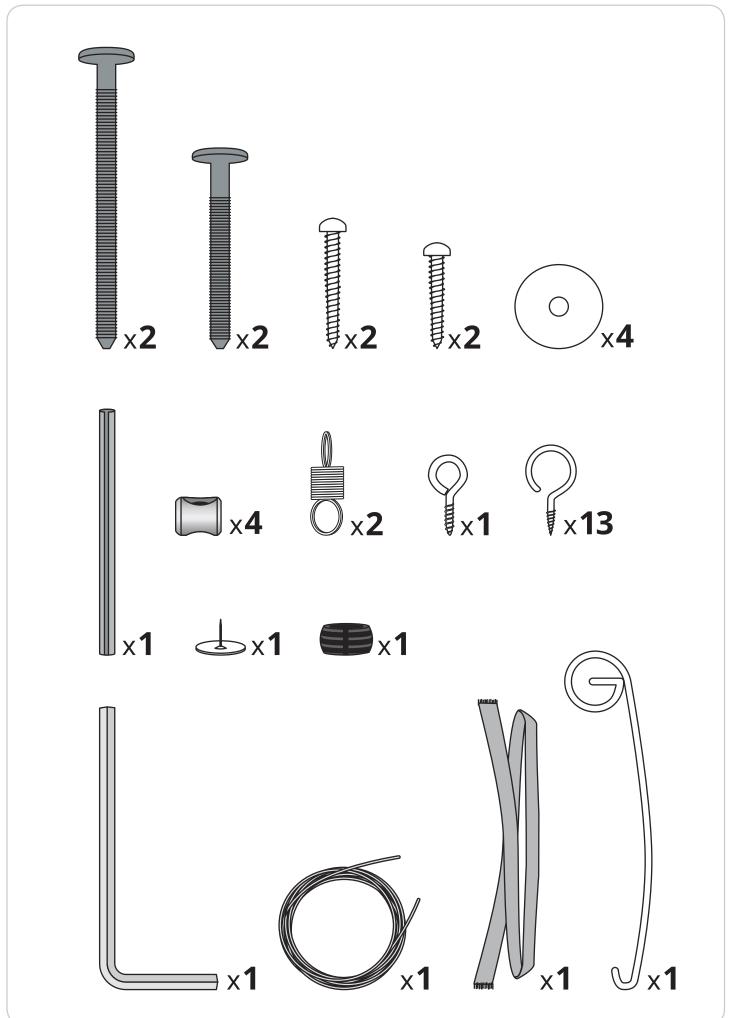



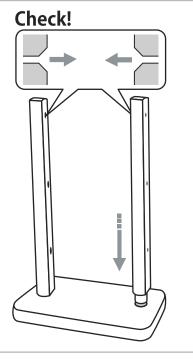


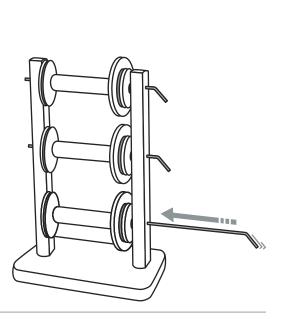

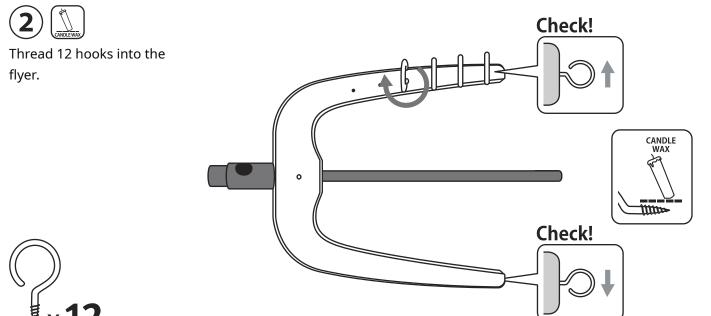

Assemble the flyer unit. Check the shape of the nylon bearing on each maid upright, wax the dowel ends, then insert into the correct hole. Insert the drive belt

Insert the drive belt adjusting knob into the maiden bar, turn until the end just protrudes.

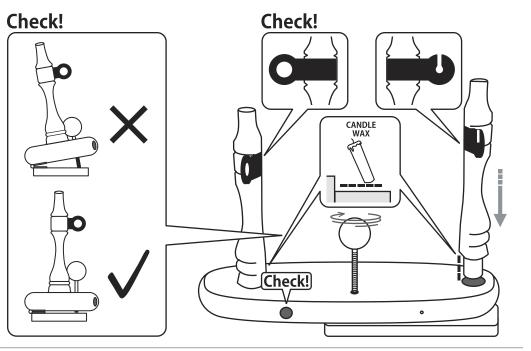




Check the angle of the nylon bearings. Then secure the maid uprights with screws and washers. Do not overtighten.


The maid uprights may be twisted to remove the bobbin.


Position the drawing pin directly beneath the drive band adjusting knob.

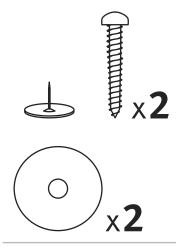


**5 Control** Place the bobbin, small end first, onto the flyer followed by the flyer whorl. Then locate the flyer into the bearings.

Thread the screw eye into the side of the maiden bar, and screw hook into the opposite side. Check!

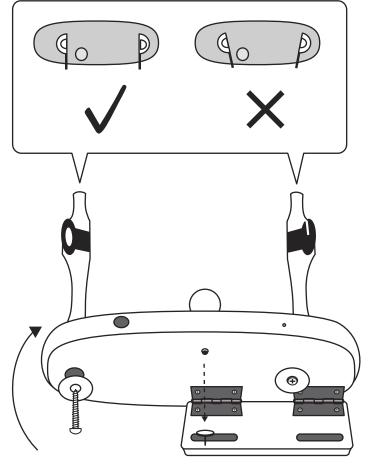

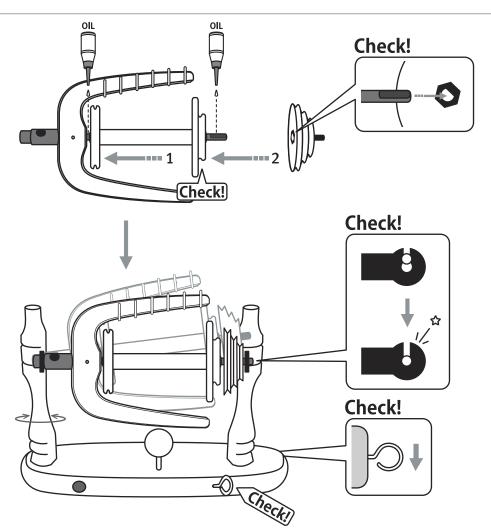


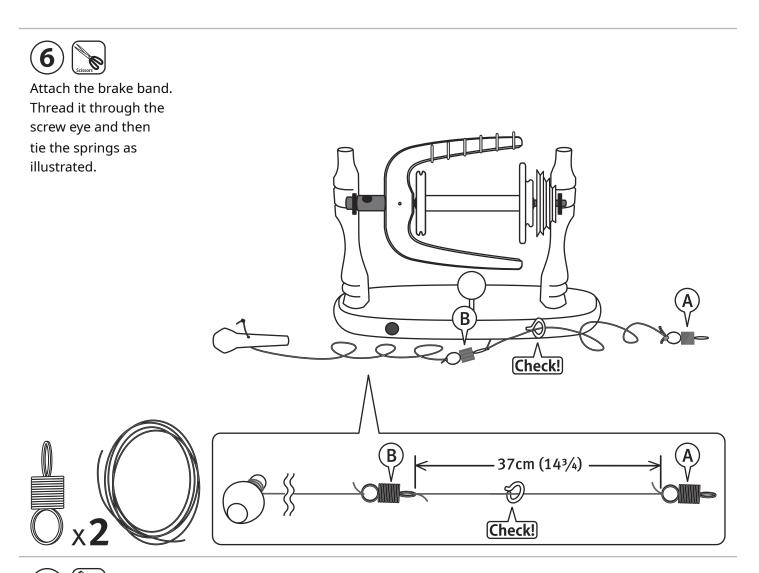




either double drive or single drive. When spinning double drive the brake band is stored around the back of the maid upright with the drive band around both the large flyer and small bobbin pulley.


When spinning single drive the drive band is around the large flyer pulley and the brake band is over either bobbin pulley. When using the brake band take care not to over-stretch the springs.

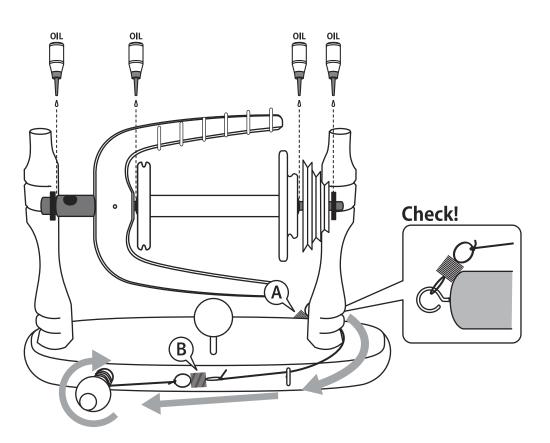


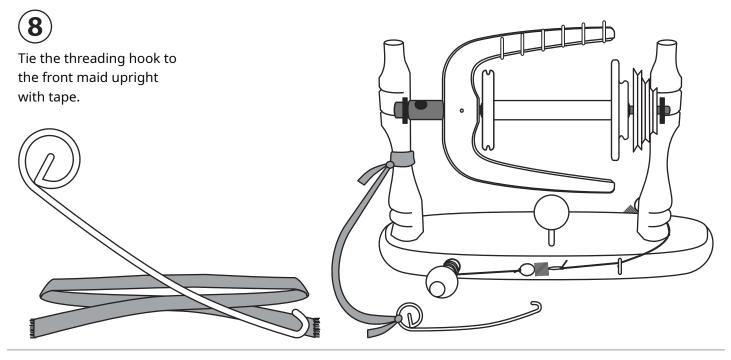

**9 1** 


Check the small hole is on the top of the side rails. Attach the side rails to the single leg with bolts and barrel nuts.

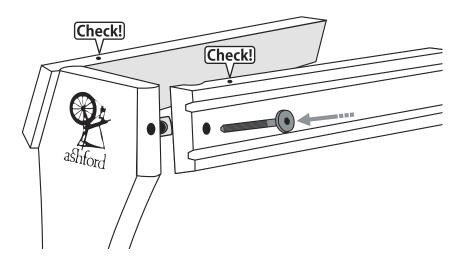


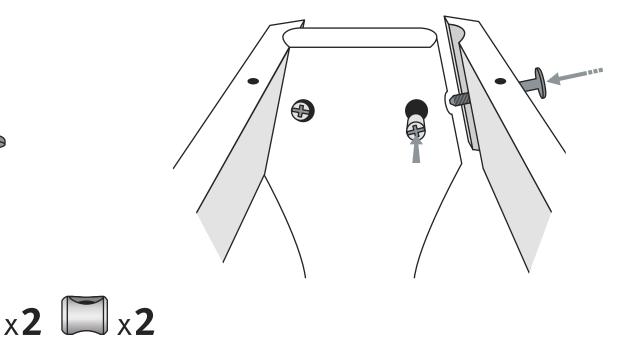





**Check!** 

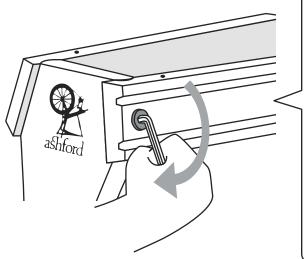


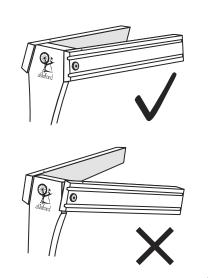


(11)Check! Set the treadle assembly on the edge of a table. Insert the conrod joint into the large slot in the treadle rail. Note the crank bearing faces the back of the spinning wheel. 1. Hold the conrod joint with one hand on either side of the treadle rail. 2. With both hands, turn the conrod joint a ¼ turn, 3. stretch and slide it into the small slot and turn it back a ¼ turn until it clicks into place.

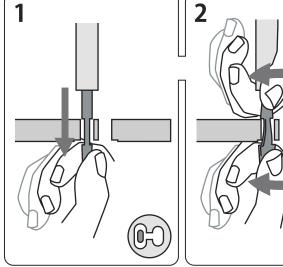

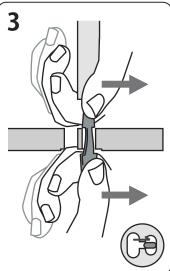

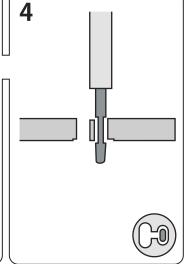




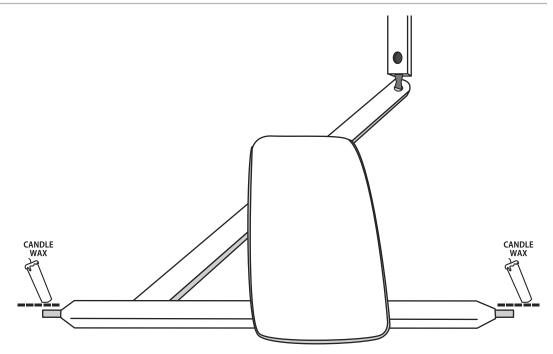


#### (13)Allen Key

Loosely attach the wheel support to the side rails with bolts and barrel nuts. Then locate the treadle rail into the holes in the legs.

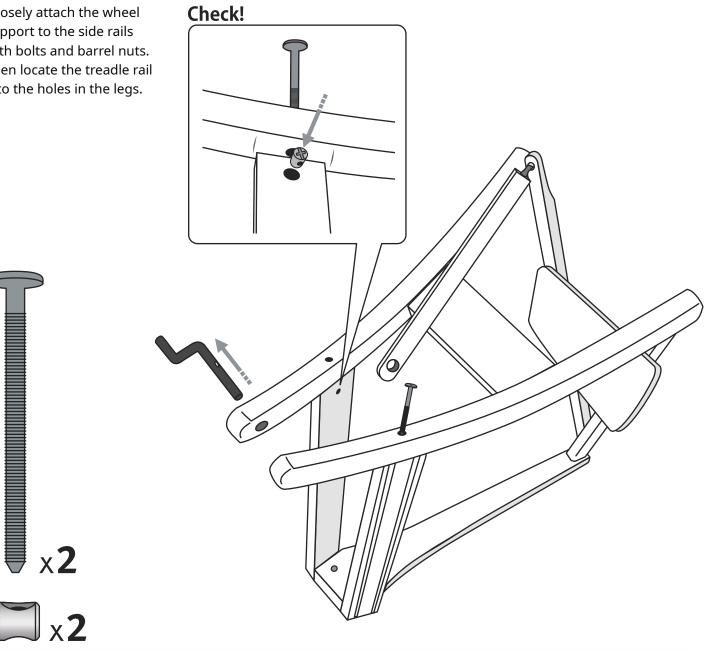


(14) Check the angle of the single leg.

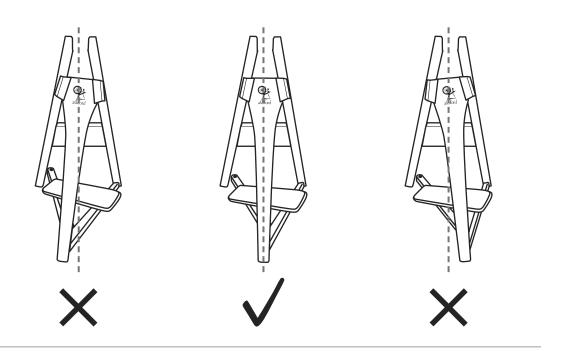





Insert the crank shaft into the wheel support. Tighten every bolt extra firmly with the allen key.

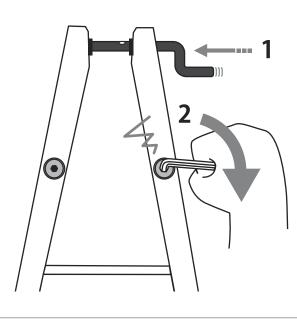




Before placing the wheel in position, check the crank fits through the hole in the hub. Wax and insert the crank shaft then remove.

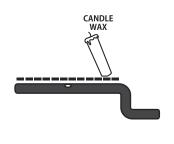

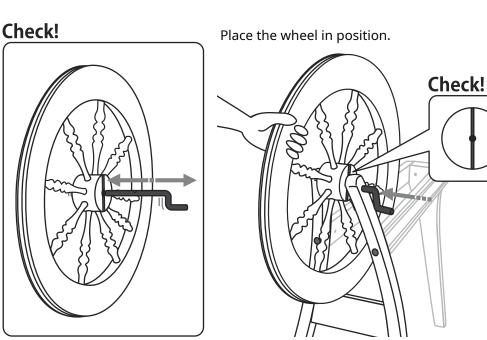

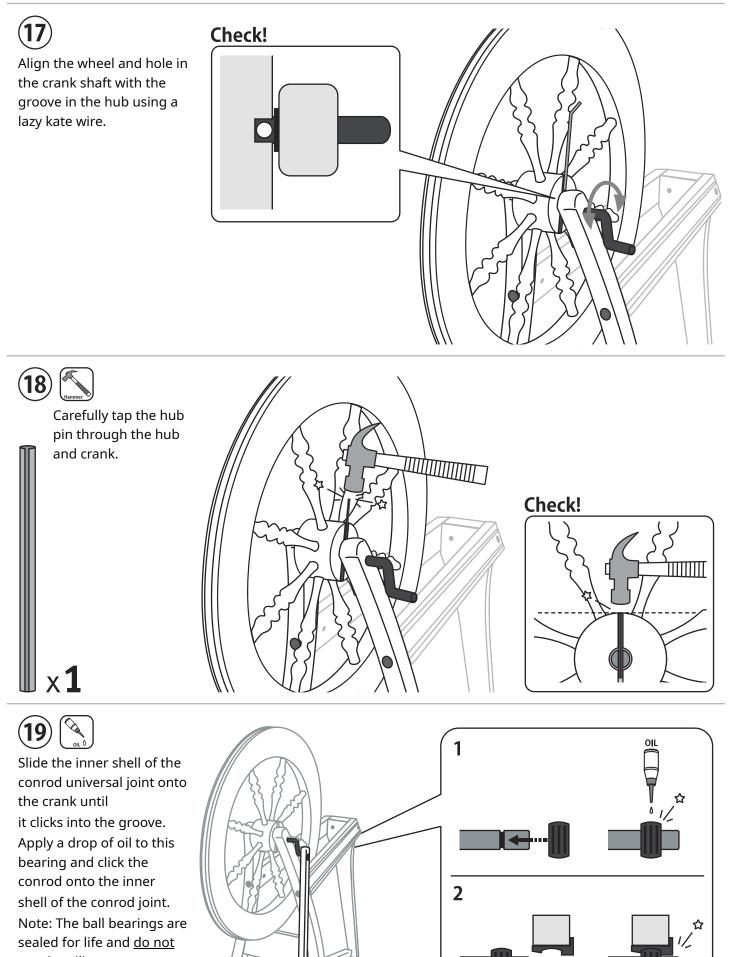


Note: The ball bearings are sealed for life and <u>do not</u> require oiling.






Attach the flyer unit to the side rails with 2 screws and washers, do not tighten yet.


Move the flyer unit until the wheel and large flyer pulley are aligned. Then tighten the screws.

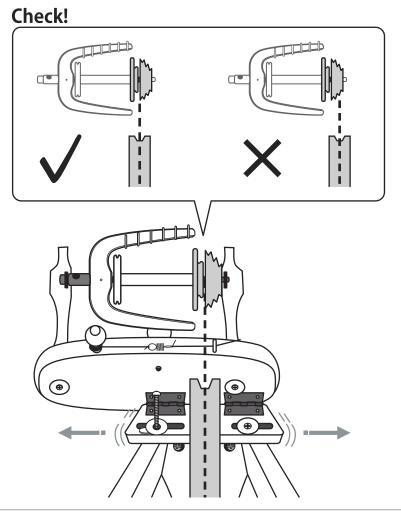

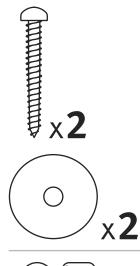


(21) Check the end of the adjusting knob is not protruding beneath the maiden bar. Then place the drive belt around the

 wheel and large flyer pulley then around the wheel again and small bobbin whorl. Tie the drive belt and cut off the extra.





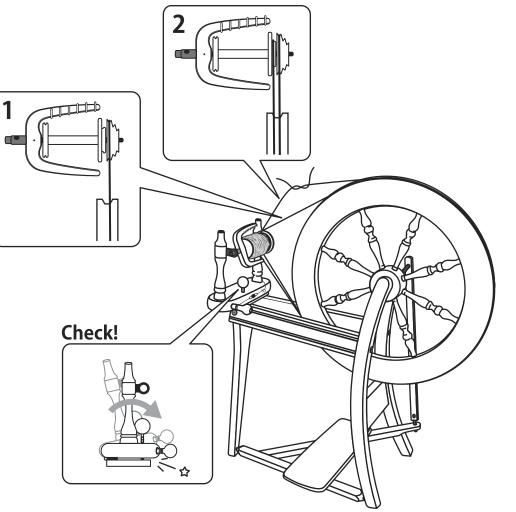

# **Check!** $\left( 0 \right)$

#### 22 b **Double drive ratios:** The ratio with the drive belt around the large flyer pulley is approx. 7.5:1. To spin a finer yarn while treadling at the same speed, move the drive belt to one of the smaller pulleys - either 9.5:1 or 13:1. (0) $\bigcirc$ $(\mathbf{0})$ 0) 7.5 : 1 9.5 : 1 13 : 1 16 : 1 **Check! Bobbin lead:** Place both loops of the Check!


drive belt around the small bobbin pulley and retension it. Then place the brake band over the large flyer pulley. This ratio is approx. 16:1. Adjust the brake band tension so the springs only just begin to stretch.






#### Single drive:

Place both loops of the drive belt around the large flyer pulley and the brake band over either bobbin pulley. Adjust the brake band tension so the springs only just begin to stretch. To spin a finer yarn move both loops of the drive belt onto the small flyer pulley and retension it.

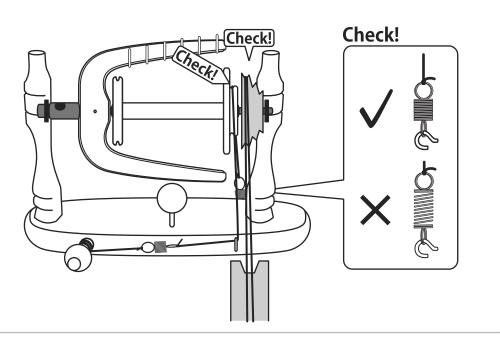

Refer to the Learn To Spin Booklet for more spinning hints. Happy spinning.

### Memo

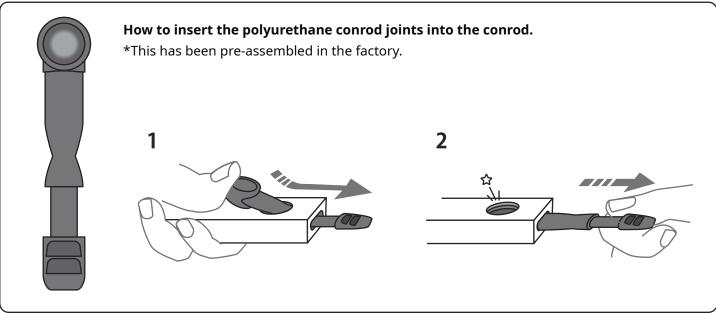



Ashford Handicrafts Limited Factory and Showroom: 415 West Street PO Box 474, Ashburton 7700 New Zealand Telephone 64 3 308 9087 Facsimile 64 3 308 8664 Email: sales@ashford.co.nz Internet: www.ashford.co.nz