

## FOOT CONTROLLER

## FOR ASHFORD e-SPINNER

On/Off foot control for Ashford Electronic Spinners.

For all e-Spinners manufactured after January 2016 with a foot switch socket in the back panel.

The e-Spinner foot switch allows you to start and stop your e-Spinner without using your hands.

- 1) Simply plug in the cord jack into the socket in the rear panel of your e-Spinner.
- 2) Tap the foot controller to turn your e-Spinner on
- 3) Tap the foot controller to turn your e-Spinner off

The power LED in the ON Switch shows the status of the e-Spinner.

Constant on. The e-Spinner is running OK

Flashing short on / long off. The e-Spinner is in standby, (speed set to ZERO or foot switch OFF). Turn the power switch off if you are going to leave your e-Spinner for any length of time.

Flashing long on / short off. The e-Spinner has a fault, (too much load or stalled motor). Reduce the brake band tension or apply a drop of oil to the front bearing.

Ashford Handicrafts Limited Factory and Showroom: 415 West Street PO Box 474, Ashburton 7700 New Zealand Telephone 64 3 308 9087 Facsimile 64 3 308 8664 Email: sales@ashford.co.nz Internet: www.ashford.co.nz



## FOOT CONTROLLER FOR eSPINNERS (MANUFACTURED AFTER JANUARY 2016)



Batch # Packed

Ashford Guarantee

Thank you for purchasing this Ashford product. In the unlikely event there is any fault in manufacture we will replace the item. To validate our guarantee please visit our website, email or write to us.